




# EPOCH

ARCHITECTURAL SURFACES

---

Recommended for kitchen backsplashes, accent walls, showers or tub surrounds. Sheets can be used in various ways to enhance your project.

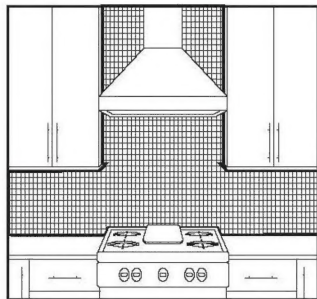

Full sheet / Hoja completa / Feuilles complètes

---

## Installation

1. Apply a premium grade white thin-set mortar using a 3/16 inch V-notch trowel.
2. Set tiles, apply pressure or tap the surfaces with a rubber grout float to ensure all tiles are bonded and aligned properly. Use a level periodically to check the grout joints.
3. After 24 hours, mix and apply grout. (Read important information below)
  - Tiles with metal or glass – **USE UNSANDED GROUT**  
It is very important to understand any abrasive materials or chemicals can scratch the surface of your tile.
  - Natural stone and ceramic – **USE SANDED GROUT**
4. Clean all excess grout immediately with a damp sponge. After 12 hours polish any remaining grout haze with a clean dry cloth.

## Cutting

A wet saw is recommended to cut mosaic tiles. A premium glass diamond blade is recommended for glass cutting. Other mosaics such as ceramic, natural stone and metal use a standard diamond blade.

## Sealing

Mosaics containing natural stone should be sealed prior to grouting. Use a premium penetrating sealer for a natural look. To darken and highlight the natural elements of the stone, use a stone enhancing sealer. Never allow sealers to dry on glass, glazed ceramic or metal.

## Care and Cleaning

Use a soft cloth or sponge with warm water or any non-abrasive mild detergent.